

# How to Use the Digital Camera

1. Take the lens cap off gently.
2. On the play or camera switch, set it to STILL.
3. To turn the camera on, push the blue button in while pushing the switch to the right.
4. Insert a floppy in the slot on the right side of the camera, so the face of the floppy is towards you and the arrow points into the camera.
5. On the camera top, push the button to take pictures.
6. To eject the floppy:
  - a. Find the buttons on the back right hand side of the camera – “push” button and adjoining switch.
  - b. Using your right thumb, push and hold the “push” button left as you pull down and release.
  - c. Upon releasing the button, you can safely remove the disk



Playback your movie or photos
Take a photo
Record a video

Turn on Camera



Carefully insert the disk in the slot.

Play or Camera switch



To eject the disk



Button to take a picture

Zoom